

QUICK START GUIDE
myPhone C1 LTE
 Lot number 202104

Table of contents

Table of contents..... 16
 Safety.....17
 Package content 19
 Technical Specifications..... 20
 Appearance of the phone, its functions and buttons 20
 Emergency change of language 22
 Factory settings 22
 SOHO functions in the phone 22
 Troubleshooting 23
 Charging the phone..... 23
 Charging without using the cradle charger 23
 Charging using the cradle charger 24
 Device maintenance 24
 Correct disposal of electrical and electronic equipment 24
 Correct disposal of used batteries 25
 Declaration of conformity with European Union Directives 25

CAUTION	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the phone and not obeying the above instructions.	The software version can be upgraded without earlier notice. The representative retains the right to determine the correct interpretation of the above instructions.

THE USE OF THE MANUAL

Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or

mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

Please read the precautions and phone user's manual before use. The descriptions contained in this manual are based on the default settings of the phone. The newest version of the manual can be found on our company website:

www.myphone.pl/qr/myphone--c1-lte

Depending on the installed version of the software, service provider, SIM card or country, some of the descriptions in this manual may not match your phone, and the phone and accessories attached to the set may differ from the illustrations included in manual.

Safety

–ALARM CALLS–

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

–DO NOT RISK–

All wireless devices may cause interferences, which could affect the quality of other connections. Do not switch the device on in places which are prohibited from using cell phones, or when it may cause interferences or other dangers. Always abide by any kinds of prohibitions, regulations and warnings conveyed by the personnel of the facility.

–CHILDREN AND PHYSICALLY OR MENTALLY DISABLED PEOPLE–

This device should not be operated by people (including children) with limited physical or mental abilities, as well as by people with no earlier experience in operation of electronic equipment. They may use the device only under supervision of people responsible for their safety. This device is not a toy. Memory card and SIM card are small enough to be swallowed by a child and cause choking. Keep the device and its accessories out of reach of children.

–PETROL STATIONS–

Do not use your mobile phone while refuelling at a petrol station or in the vicinity of chemicals.

CAUTION! *In places where there is a risk of explosion (i.e. Petrol stations, chemical factories etc.), it is advisable to turn off the phone. Please refer to regulations governing the use of GSM equipment in these places.*

–QUALIFIED SERVICE–

Only qualified personnel or an authorized service center may install or repair this product. Repairing by an unauthorized or unqualified service may cause device damage and warranty loss.

–ROAD SAFETY–

Do not use this device while driving any kind of vehicle.

–WATER AND OTHER LIQUIDS–

Protect the device from water and other liquids. It can influence work and the life span of electronic components. Avoid using the device in environments with high humidity like kitchens, bathrooms or during rainy weather. Particles of water can cause the liquefaction of moisture in the device, and this may have a negative impact on the work of electronic components.

–BATTERY AND ACCESSORIES–

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used only according to its purpose. Do not destroy, impair or throw the battery into flames - it is dangerous and may cause fire. Worn-out or impaired battery should be placed in a dedicated container. A single battery charge should not last longer than 1 day.

Installing an incorrect battery type can cause an explosion. Never open the battery. Please dispose of battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire damage, it should not be repaired but replaced with a new one. Use only the original manufacturer's accessories.



–HEARING–

To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.



–EYESIGHT–

To avoid eyesight damage do not look closely onto the diode during its work. A strong beam of light may cause permanent eye damage!

Manufacturer:

mPTech Sp. z o. o.
Nowogrodzka 31 street
00-511 Warsaw, Poland
Manufactured in China
www.mpotech.eu


Package content

Before you start using your phone, make sure all of the following items are included in the box:

- mobilephone myPhone C1 LTE,
- battery,
- charger,
- user manual.

If any of the above items is missing or damaged, please contact your dealer. We advise to keep the container in case of any complaints. Keep the container out of reach of children.

Technical Specifications

- Dual SIM (2x nanoSIM) GSM 850/900/2100MHz, 3G: 900/2100MHz, 4G (LTE): 800/900/1800/2100/2600MHz
- Colour display 2.8" 240x320 px
- Audio player, FM Radio, Torch, Bluetooth, Camera 2Mpx
- MicroSD memory card reader: up to 16 GB
- Battery: Li-ion 1800 mAh
- Outputs: minijack 3.5mm, USB-C
- Charger input parameters: 100-240 V~, 50/60 Hz, 0.2A
- Charger output parameters: 5.0V , 1.0A, 5.0W
- Average efficiency during operation (for 230V, 50hz): 73.62%
- Energy consumption in no-load condition: less than 0.3W
- Phone dimensions: 134 x 57 x 14,9 mm
- Phone weight: 82 g

Appearance of the phone, its functions and buttons

1	Speaker	A speaker used in phone conversations.
2	Display	LCD display.
3	<Menu> button	While on the main screen enables entering the Menu, and confirms choice while in the Menu.
4	<Green handset> button	Allows you to receive an incoming call or look through the list of calls.
5	Navigation button Up / Down / Left / Right	While in Menu enables navigating around it. On the main screen launches shortcuts to selected functions.

6	<Contacts> button	Press to enter the phonebook. While in the Menu you can exit or opt out.
7	<Red handset> button	Allows you to reject an incoming call. While in the Menu allows you to return to the main screen. When held for a long time, it turns off the phone or, if it is switched off, turns it on.
8	<*> button	Pressed after button Menu allows to lock or unlock the phone. Decreases volume in multimedia apps. When writing an SMS, it displays symbols for insertion into the content.
9	<#> button	Switches between audio modes and character input modes for texting, increases the volume in multimedia applications.
10	External speaker	Loudspeaker for system sounds, ringtones, music.
11	Phone keypad	Buttons for dialing a phone number on the main screen and entering letters or numbers in the SMS writing mode.
12	Camera	Camera lens for taking photos and recording videos.
13	LED	Diode is used as a torch.
14	MicroUSB port	When connected enables recharging the battery. You can transfer data (photos, videos, music) when you connect it to your computer.
15	Headphone port minijack 3.5 mm	Allows you to connect headphones to the phone, so you can listen to the radio (they improve the quality

		of reception - they work as an additional antenna), music, as well as make calls (when headphones are equipped with a microphone).
16	Contacts	Allows you to connect the phone to a charging base.

Emergency change of language

To set the user's language, if someone accidentally chose an unknown one, press the **Menu** > **Down** > **OK** > **OK** > **Down** > **OK** > **OK**, and choose the language you want.

Factory settings

To restore the system to factory settings, select [**Menu**] > [**Settings**] > [**Phone Settings**] > [**Factory Settings**], input the phone password and confirm by pressing <**OK**>. The code for resetting to factory settings is: 1122.

SOHO functions in the phone

Conference call

The SIM card that supports conference calls must be in the SIM1 slot.

This feature allows you to talk to two people at the same time. To use the conference call, make or answer a call and then make a call to another number (entered manually or selected from the phonebook) from the same SIM1. The first call is put on hold. To include the person in the conference, select [**Merge Call**] from the main menu.

Call transfer

This function enables you to transfer (switch) a caller to another phone number during call in progress.



The operation of the above functions depends on the network services offered by your service provider.

Troubleshooting


Message / problem	Possible solution
Insert SIM card	Make sure SIM card has been correctly installed.
Input PIN	If the SIM card is secured with the PIN code you have to enter the PIN when turning the phone on and press <OK>.
Network fail	In areas where signal or reception is weak, calls may not be possible. Also receiving calls may not be possible. Move to another location and try again.
The connection cannot be established	Check if the typed-in phone number is correct. Check if the phone number entered to the [Contacts] is correct. Enter the correct phone number if necessary.
I cannot hear the caller./ The caller cannot hear me	The mic. should be close to mouth. Check if the built-in mic. is not covered. When a headset is un use, check if it has been connected correctly. Check if the built-in speaker isn't covered.
No one can call me	The phone has to be on and within GSM network reach.

Charging the phone

Charging without using the cradle charger

Plug in the USB-C cable to USB-C connector in the phone then connect USB connector to the adapter and to power grid.

****CAUTION:*** *Improper connection of the cable and charger may cause serious damage to the phone and/or charger. Damage caused by improper use of the phone and its accessories is not covered by the warranty.*

During charging and once the battery is charged, the following (or similar) icon will appear: . After charging, unplug the charger from the electrical outlet. Disconnect the cable from the socket on the phone.

Charging using the cradle charger

Connect the charging base with the USB-C plug of the cable to the charging connector. Plug the USB-C connector of the cable into the charging base and the USB plug into the socket on the charger, then plug the charger into a power outlet. Place the phone in the cradle charger.

****Note:*** Incorrect connection of the cable and charger may cause serious damage to the phone, charger and/or base. Damage caused by misuse of the phone and its accessories is not covered by the warranty.

Device maintenance

Follow the instructions below.

- For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis.
- Use the original accessories only. Violation of this rule may result in an invalidation of the warranty.

Correct disposal of electrical and electronic equipment



The device is marked with a crossed-out garbage bin, in accordance with the European Directive 2012/19/EU on used electrical and electronic equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol should not be disposed of or dumped with other household waste after a period of use. The user is obliged

to get rid of used electrical and electronic equipment by delivering it to designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources. Proper disposal of used electrical and electronic equipment is beneficial to human health and environment. To obtain information on where and how to dispose of used electrical and electronic equipment in an environmentally friendly manner user should contact their local government office, the waste collection point, or point of sale, where the equipment was purchased.

Correct disposal of used batteries



According to the EU directive 2006/66/EC with changes contained in EU directive 2013/56/UE on the disposal of batteries, this product is marked with crossed-out garbage bin symbol. The symbol indicates that the batteries used in this product should not be disposed with regular household waste, but treated according to the legal directives and local regulations. It is not allowed to dispose of batteries and accumulators with unsorted municipal waste. Users of batteries and accumulators must use the available collection points of these items, which allows them to return, recycle and disposal. Within the EU, the collection and recycling of batteries and accumulators is a subject to separate procedures.

To learn more about existing procedures of recycling of batteries and accumulators please contact your local office or an institution for waste disposal or landfill.

Declaration of conformity with European Union Directives



mPTech Ltd. hereby declares that myPhone C1 phone is compliant with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following Internet address:

www.myphone.pl/qr/myphone-c1-lte